



Loosen Top Allen Key Shown



Loosen Bottom Allen Key Shown



Now tighten the center bolt in the headstem, this will eliminate freeplay



The side Allen key bolts should both still be really loose, so retighten them

Now you're done