

Black Star BMX Freestyle Disc Brake Adjustment Tips



This is the finger tip adjustment knob, it centers the brake pads over the disc so when you spin the wheel, the disc runs smoothly through the center of the brake pads



This is a cable tension adjuster on the disc brake, hold tight where the red coloured arrow is pointing while you twist the above part where the hand is holding to loosen or tighten



If you need to adjust the brake pads a lot closer (or tighter), then you will need to loosen the Allen key shown and pull more cable through, then retighten the Allen key firmly



These two Allen key bolts shown above, hold the disc brake caliper onto the frame. You will need to undo these two bolts if changing the disc pads. The disc pads in Speed disc brakes shown are a common size available at bike stores



Hold tight where the blue coloured arrow is pointing with one hand while you twist the above part where the hand is holding (left photo) to loosen or tighten cable, can be done above each brake lever. The right photo is the divider for the front freestyle rotor, you can adjust tension here in the same way